


## AL-55A Exploded View/Parts List

### ⚠ WARNING

This diagram is for your reference only. Do not attempt to service or repair the Tool.  
Do not take the Tool apart. Contact an authorized Nitto dealer for all service and repair of the Tool.  
Improper service and repair can cause accidents and severe injuries.  
Never attempt to modify the Tool.  
Never attempt service or repair the Tool yourself.

Exploded view/parts list are subject to change at any time without notice. (As of Sep. 2019)

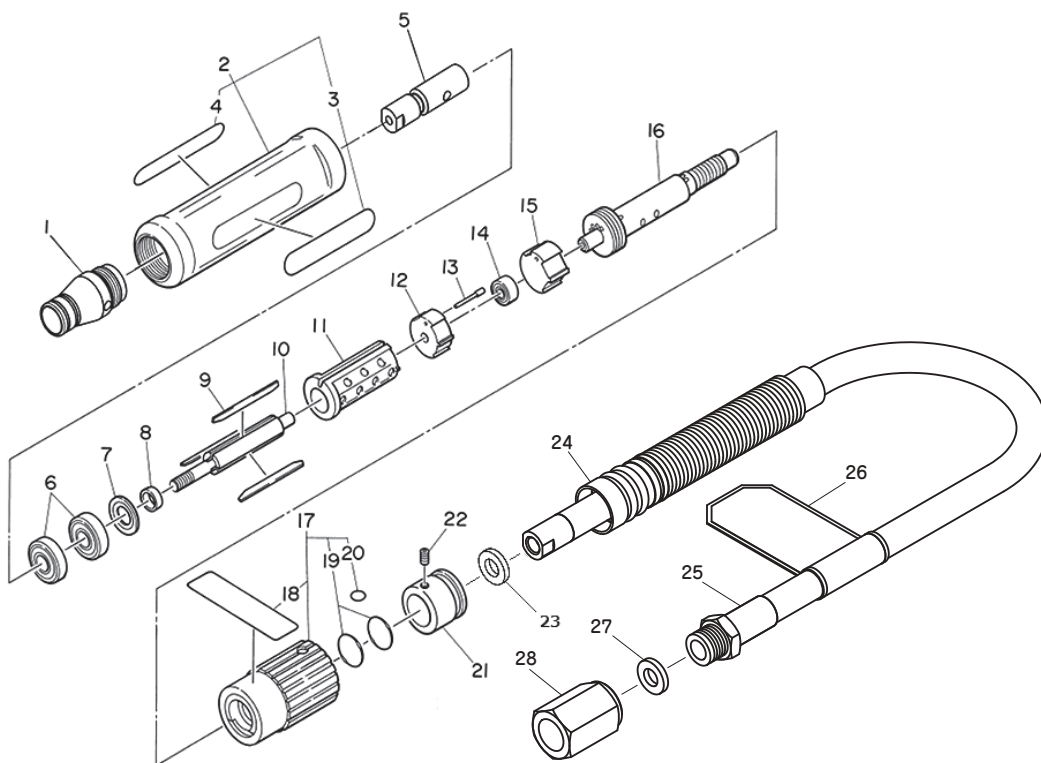

The part numbers with ( ) are included in the Ass'y parts above them.

No.	Part No.	Description	Qty
1	TQ14649	Front Cover	1
2	TB10816	Housing Ass'y	1set
3	(TQ15861)	Label Nitto	1
4	(TQ15863)	Label Specification	1
5	TB10818	Chuck Ass'y	1set
6	TQ15873	Ball Bearing 619/2Z special	2
7	TQ04346	End Plate B	1
8	TQ04347	Spacer	1
9	TB03352	Blade Ass'y (3pcs.)	1set
10	TQ04343	Rotor	1
11	TQ04344	Cylinder	1
12	TQ04345	End Plate A	1
13	TQ04365	Positioning Pin	1
14	TQ04349	Ball Bearing 693ZZ special	1
15	TQ04364	Intake Plate	1
16	TB03309	Hose Plug Ass'y	1set
17	TB10868	Valve Ass'y	1set
18	(TQ15874)	Label Warning CE Mark	1
19	(TP12004)	O Ring P-10	2
20	(TP11994)	O Ring P-4	1

No.	Part No.	Description	Qty
21	TQ04366	Rear End Holder	1
22	TQ04369	Hex. Socket Set Screw 4x3	1
23	TQ06399	Spacer 6.3x12.1x2	1
24	TQ04367	Exhaust Hose	1
25	TQ04368	Air Hose	1
26	TQ11519	Label Lubrication	1
27	CP07658	Packing 1-8x13.3x2.5	1
28	TQ05091	Socket R1/4xG1/4	1

#### Accessories

No.	Part No.	Description	Qty
	—	Mounted Wheel 5x13x3	1
	TB09908	Spanner Ass'y	1set
	(TQ04371)	Spanner 7x9	1
	(TQ15008)	Lock Wrench	1
	TQ12790	Instruction Manual	1
	TP02236	Bushing R1/4xNPT1/4	1
	TQ12791	Declaration of Conformity	1